



## Installation of the P1 Sirius Pro adapter on a Sirius Pro mount

Installation of the P1 on a Sirius Pro mount is slightly different than some of the other mounts sold by Orion. The P1 adapter will attach where the bubble level currently sits, so first the bubble level itself must be removed. Refer to the pictures below for step by step instructions.



**Figure 1.** Locate the bubble level on the mount – you'll need a Philips screwdriver to remove the bubble level from the chrome colored backplate.



**Figure 2.** Remove the two black Philips screws to remove the bubble level.



**Figure 3.** The bubble level has been removed. Note that the chrome colored backplate stays attached to the mount.




**Figure 4.** Install the P1 Sirius Pro plate using the socket head cap screws included in the adapter box.



**Figure 5.** The P1 Sirius Pro back plate fully installed on the Sirius Pro mount



Figure 6. Attach the P1 to the backplate using the three long Philips screws included in the P1 camera box. Note the proper orientation of the connector port -- facing left (towards the mount). The three holes in the camera are through holes (no threads), and the screw threads will engage in the plate behind the camera.

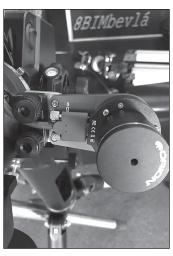

**Figure 7.** The fully assembled P1 on the Sirius Pro mount.